


TELESCOPIC MOLE POST.

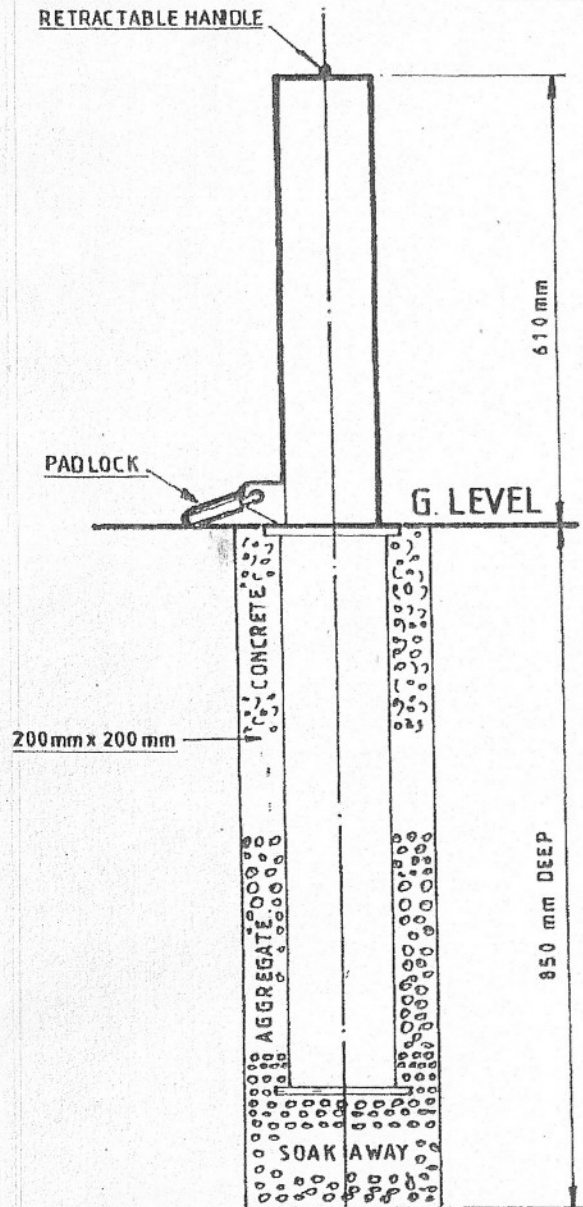

INSTALLATION

1. Select suitable position for unit, ensuring that there are no obstructions underground.
2. Place the unit in the prepared hole approx. 200mm x 200mm x 850mm deep.
3. Allow for aggregate at base to act as soak away.
4. Re-adjust position as necessary.
5. Flood grout the remaining space with a strong concrete mix not less 3-2-1.
6. Allow concrete to cure before attempting to operate the unit.

OPERATION

1. Raise the post to full height by the handle in top of the post.
2. Shoot bolt will hold post erect.
3. Secure the post by fitting a padlock of sufficient strength in the hole of the shoot bolt, at the base of the post.
4. To lower the posts, remove padlock, grip handle on top of post, push in shoot bolt with toe of shoe and lower post into closed position.

MAINTENANCE

The Mole post should be wiped down occasionally with a light spray oil such as WD 40.

Shoot bolt housing should be sprayed with oil to maintain easy movement, and grit and stones should be swept away from the edges of the top flange regularly.

Simple routine maintenance as described will ensure that the post has a long trouble free life.

NOTE

DUE ACCOUNT SHOULD BE TAKEN OF THE WATER TABLE IN THE AREA OF THE PROPOSED INSTALLATION.

IMPORTANT

THIS POST SHOULD BE MANUALLY LOWERED - NOT DROPPED.